

OBSOS GMT400 Toolless Spark Plug Retainer Kit

This is a complete kit for supporting 8mm spark plug wires using the stock GM TBI head brackets. This toolless kit is a direct fit for the OEM retainers.



Tools and Supplies needed:

Silicone grease or other plastic-safe lubricant

Parts List:

- A. (2) GMT400SK1A Two Wire Toolless Plug Retainer
- B. (2) GMT400SK1B Four Wire Toolless Plug Retainer

Installation Steps:

STEP 1: Remove the plug wires from the retainers and what's left of your spark plug retainer brackets. These are held on by friction to the factory metal bracket and slide toward the front of the vehicle for removal.

STEP 2: Reference Diagram 1 above and apply a small amount of silicone lubricant (or other similar grease) to the tops of the retainers. This will allow the plug wires to slide easily into the keepers without damaging the wire or the retainer.

STEP 3: Slide the retainers on to the factory brackets as indicated in Diagram 2 below. Some brackets have a bump that will index with the groove in the retainer, so ensure that you slide it on with the groove end first.

STEP 4: Push the plug wires into the correct retainer location as indicated in Diagram 3 below. For the best results, route the frontmost plug wires through the top of the four wire retainer, working your way down the retainer as you move toward the back of the engine.

DIAGRAM 1:

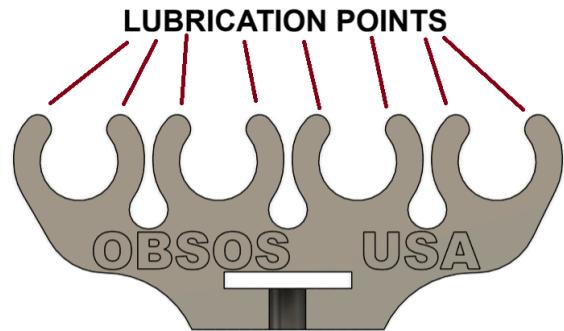


DIAGRAM 2:



DIAGRAM 3:



- END GUIDE -